

RC201 Quick Guide

www.aimpro21.com V1.0

1. Install Battery

- Remove the battery cover.
- Insert in battery. Positive side faces up.
- Put back battery cover.




2. Install CD

- Install the CD to your computer.
The following window will pop up.
Install the application and execute it before you start using the presenter.





3. Key Definition

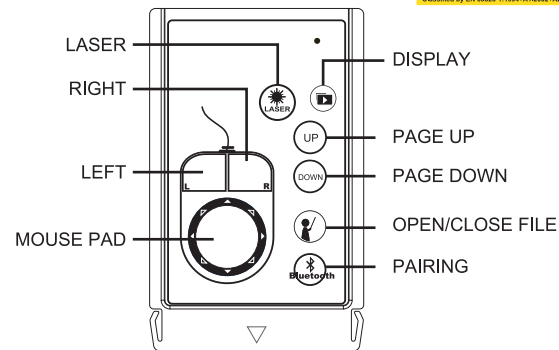

4. Pairing

- Press and hold button for 3-5 seconds until the Blue LED flashes.
- Right click "aimMaster BT" icon on the system tray, select "Auto Pair".

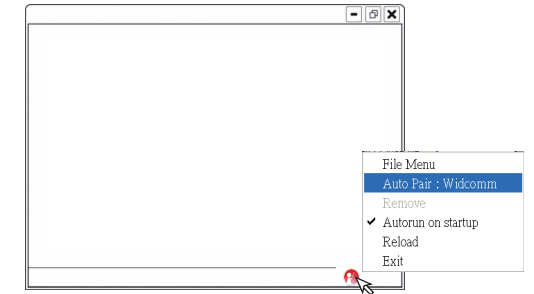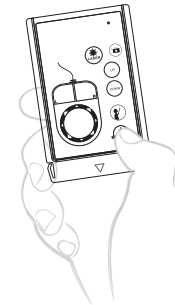


- After pairing is done, the icon on the system try changes to green color .

5. USE Presenter

Start to use the Mouse and LASER , LEFT , RIGHT , PAGE UP , PAGE DOWN buttons for presentation.


- Set Open File Paths.
Double click **aimMaster BT** icon on the system tray. Enter up to 3 paths of the files to be presented.

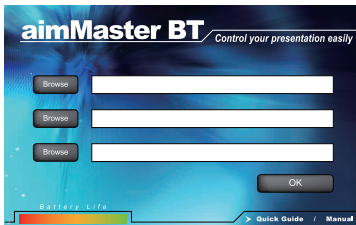

- Click OPEN/CLOSE FILE button to open the files for presentation.
- Click DISPLAY button to play the Power Point file.

6. Check Pen Mode


- Press and hold the RIGHT button for 2 seconds to activate Mark Function. The first mode entered is Check Pen Mode.

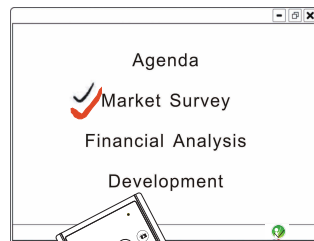

- Each LEFT click will leave a red check mark below the cursor position.

7. Line Pen Mode

Click the RIGHT button once to enter the Line Pen Mode. Press and hold the LEFT button will draw a red line and this red line extends towards the right direction. The longer you hold the LEFT button , the longer the red line is.

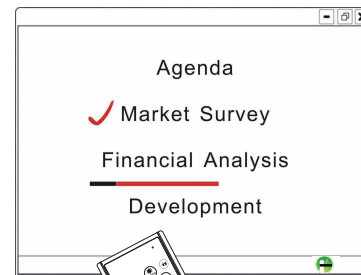

8. Mouse Mode

Click the RIGHT button again to go to the Mouse Mode. The cursor becomes an arrow. It has the normal mouse functions. Click the RIGHT button to go back to the Check Pen Mode.




9. Undo the Marks

Click PAGE UP button once will clear the latest Check/Line Mark. The further PAGE UP clicks will undo the marks until all the Check/Line marks are cleared.

10. Blank the Screen

When Mark Function is activated, press and hold the RIGHT button for 1 second, the screen becomes blank. To get back the original screen, click PAGE DOWN button once.

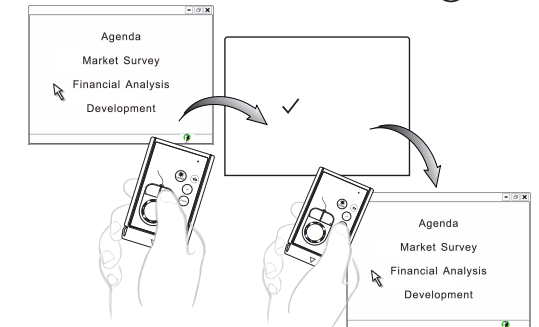

11. Clear all Marks

Either click PAGE DOWN button once, or, press the ESC key of your keyboard. Mark Function is then disabled.

If you need to know detail of **aimMaster BT** operation, please check the user's manual in the application CD.